

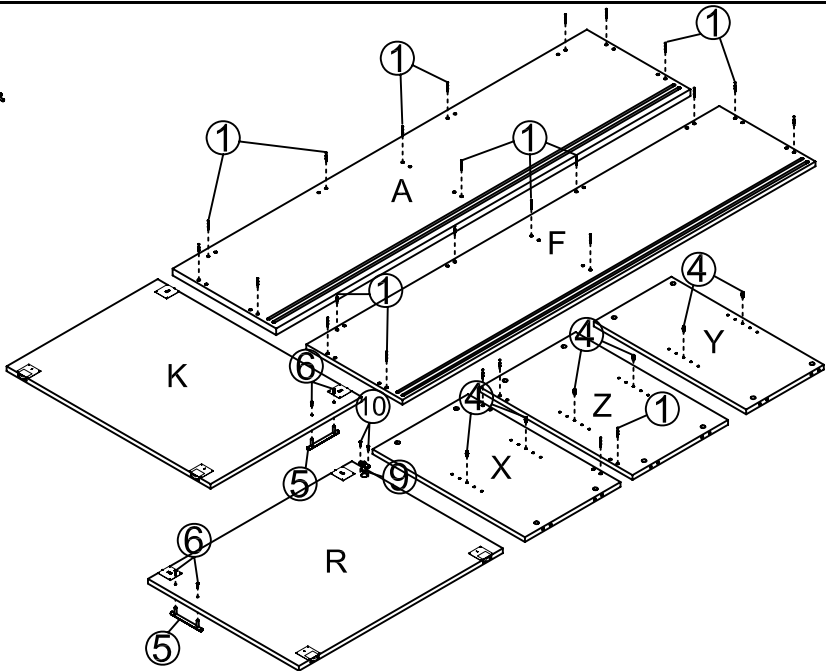
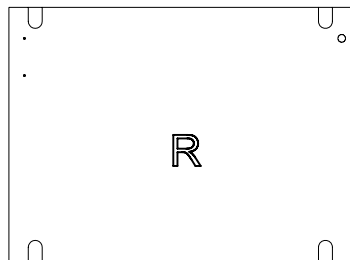
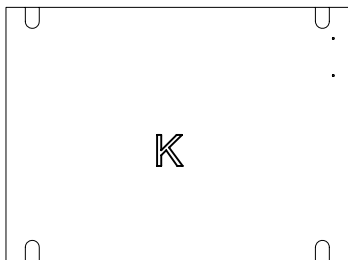
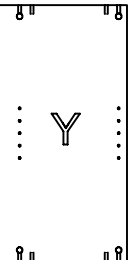
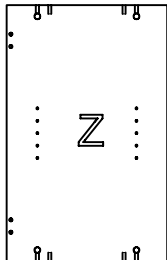
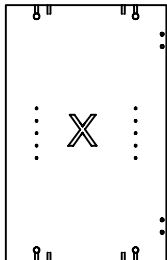
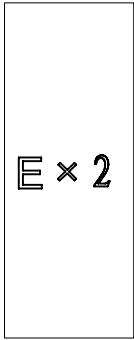
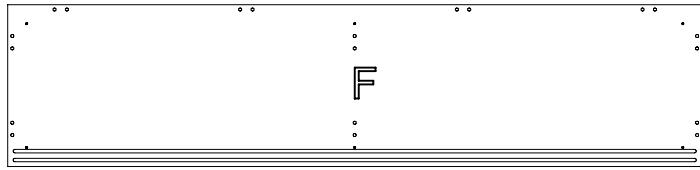


ASSEMBLY INSTRUCTIONS


CCZ1845

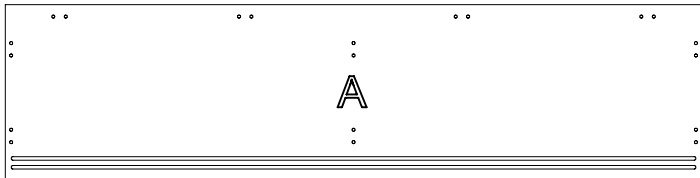


pin 6x35 1 24PCS	CAM 2 24PCS
Cam Cover 3 24PCS	Bolt M8x16 4 8PCS
T-Handle 5 2PCS	Screw 4x22 6 4PCS
CUSHION 28H1A 65 7 6PCS	Screw 4x30 8 6PCS
LOCK 9 1PCS	Screw 3.5x13 10 2PCS

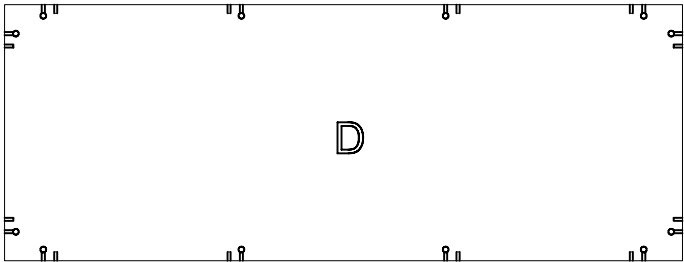


1

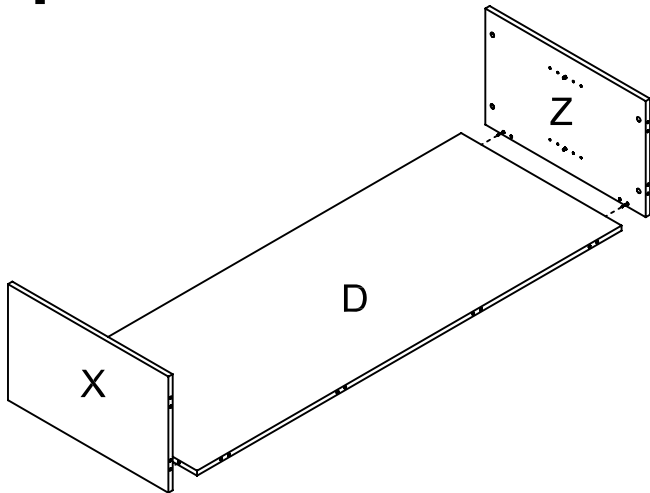


2

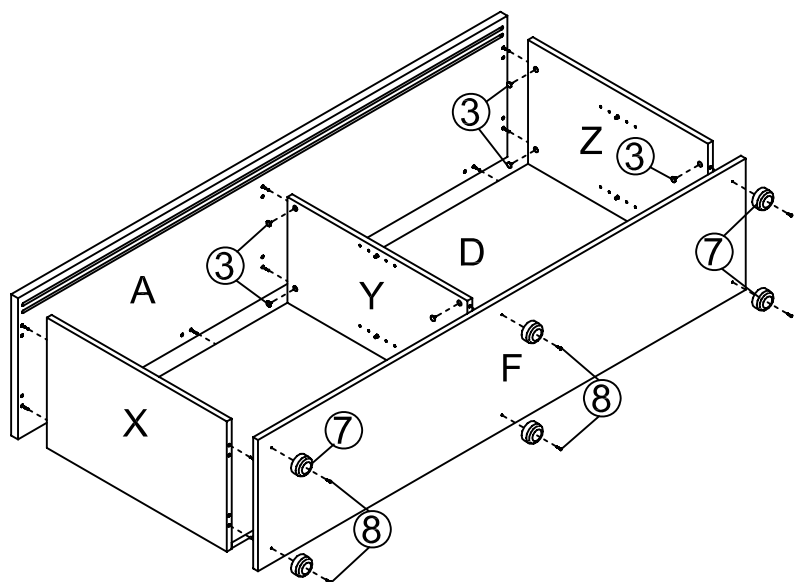


3

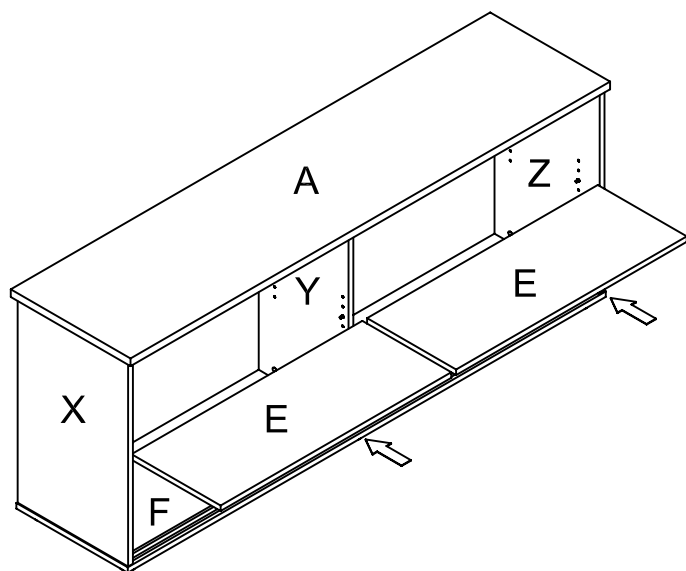



4

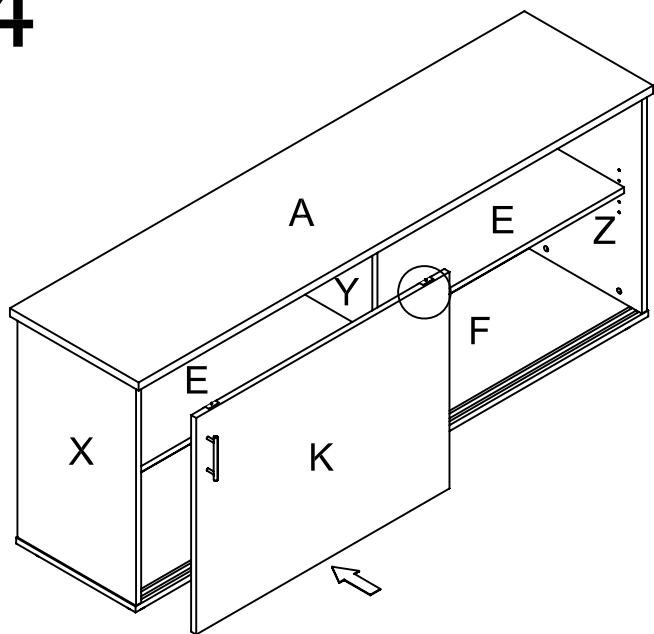

5

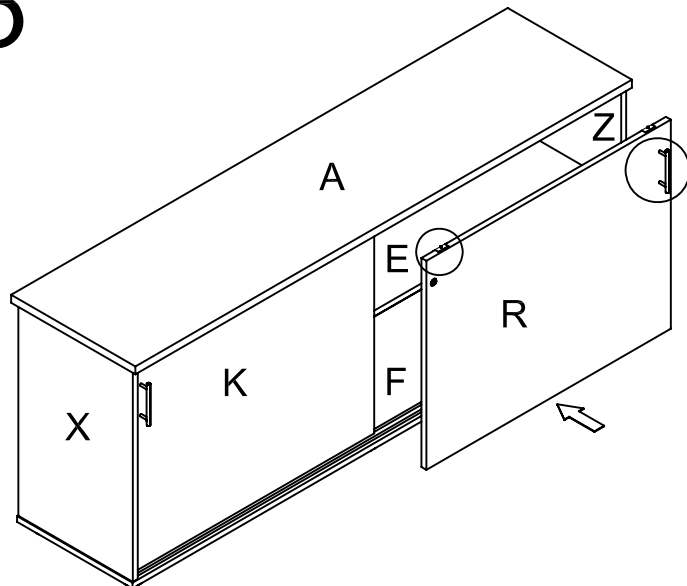




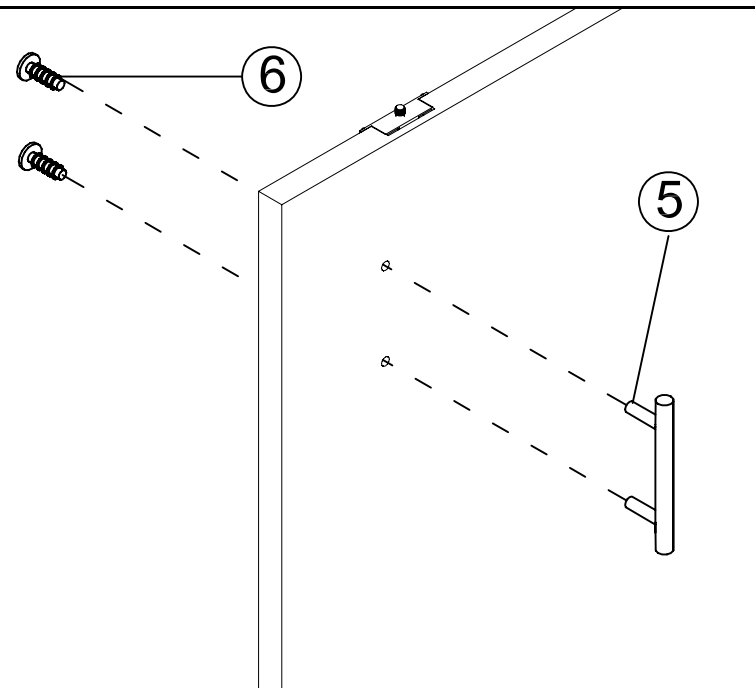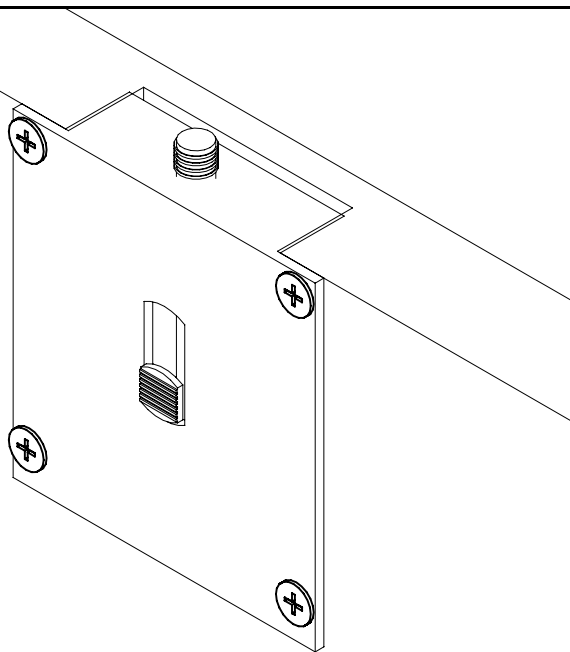







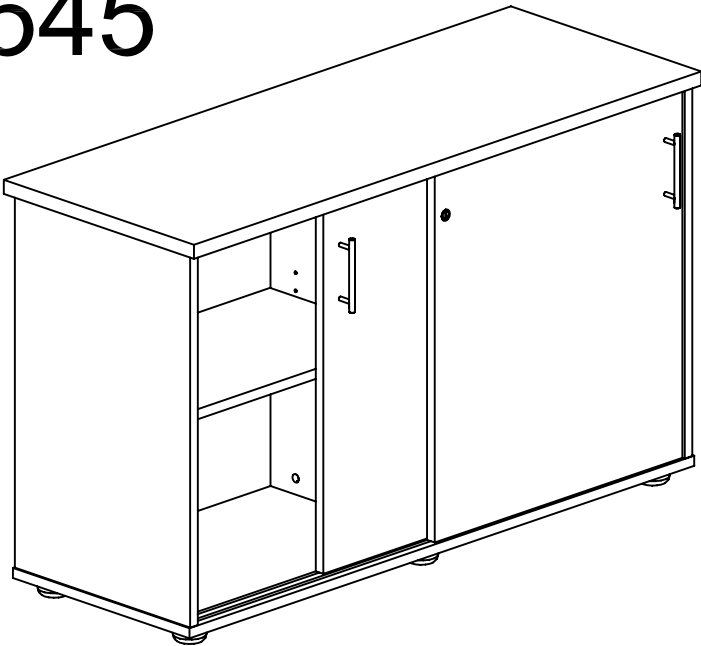
6






ASSEMBLY INSTRUCTIONS


CCZ1545




 pin 1 6×35 20PCS	 CAM 2 20PCS
 Cam Cover 3 20PCS	 Bolt M6x16 4 18H1A φ6 8PCS
 T-Handle 5 2PCS	 Screw 6 4×22 4PCS
 CUSHION 7 25H1A φ32 8PCS	 Screw 8 4×30 6PCS
 LOCK 9 1PCS	 Screw 10 3.5×13 2PCS
	

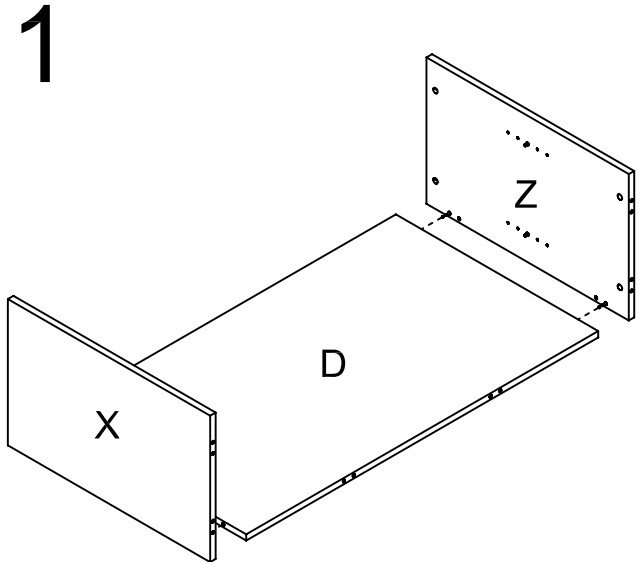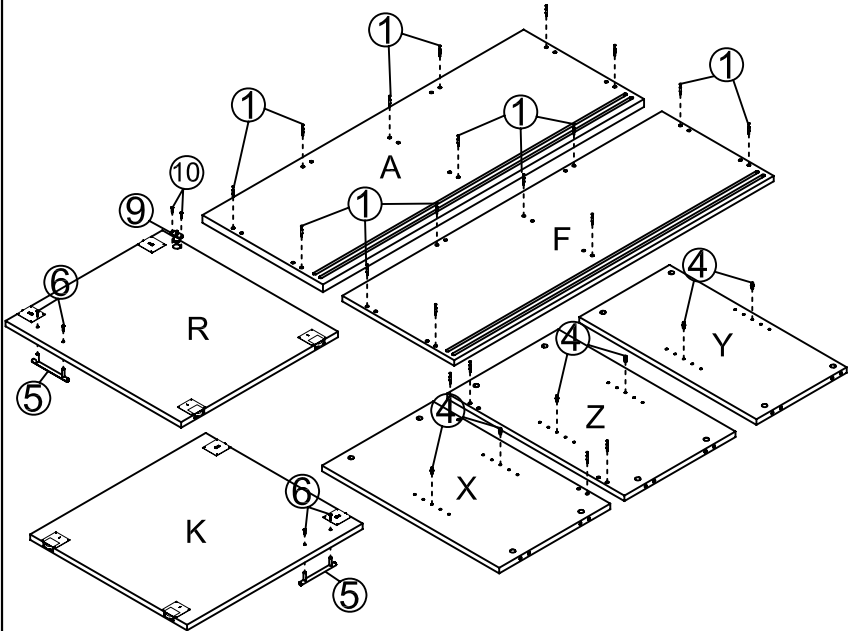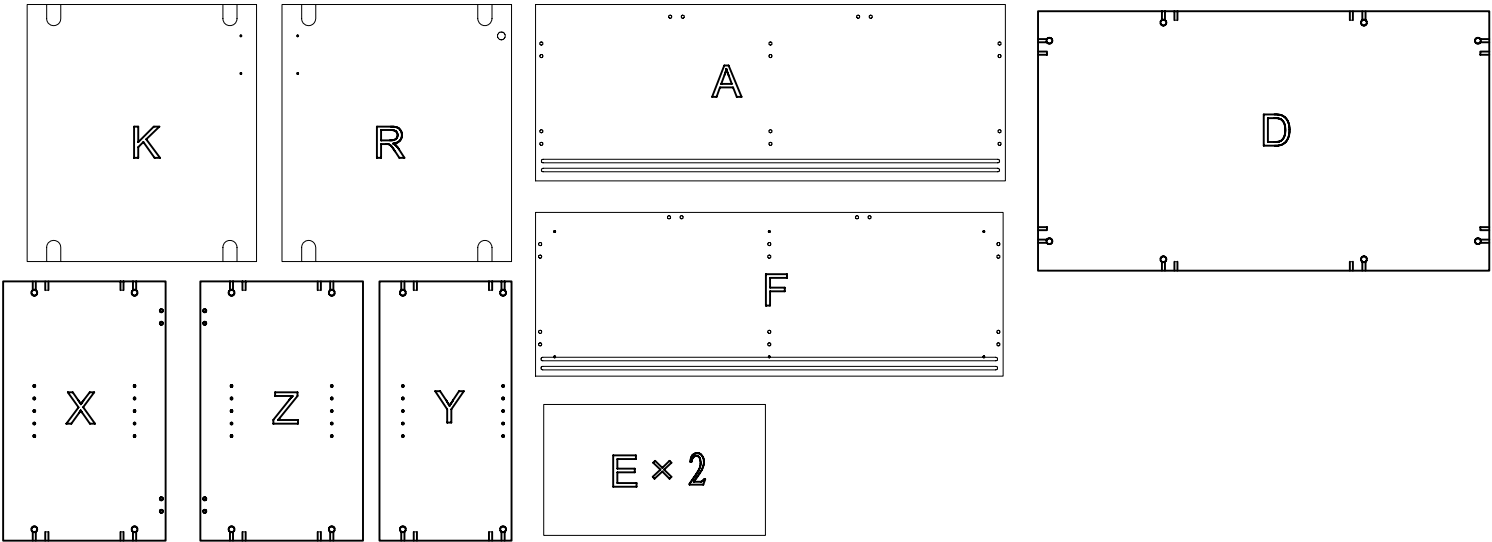


2

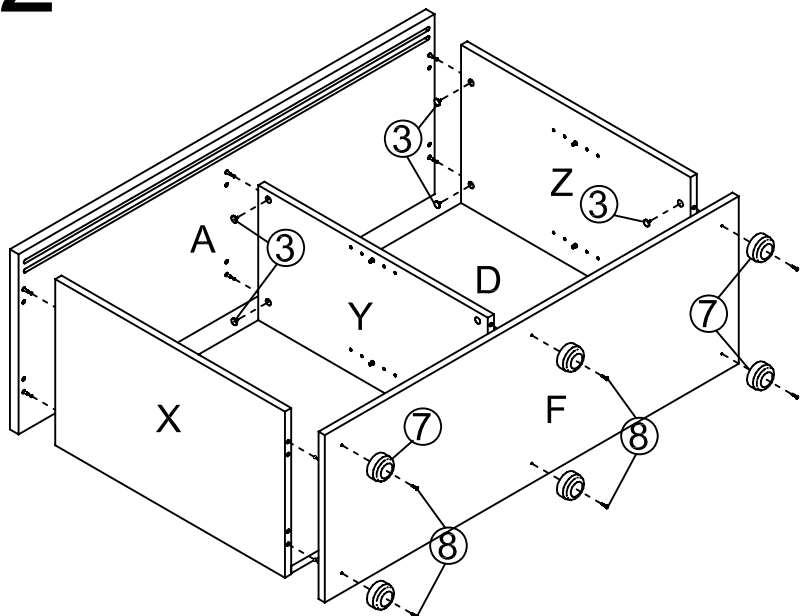


3

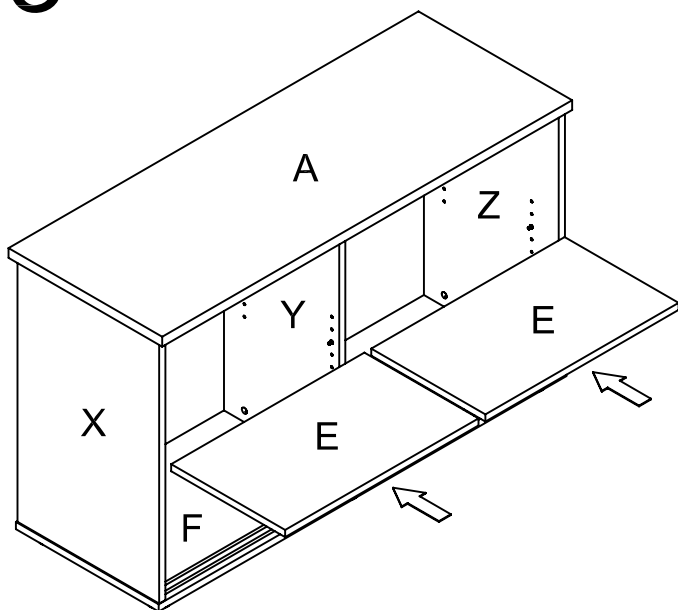



4

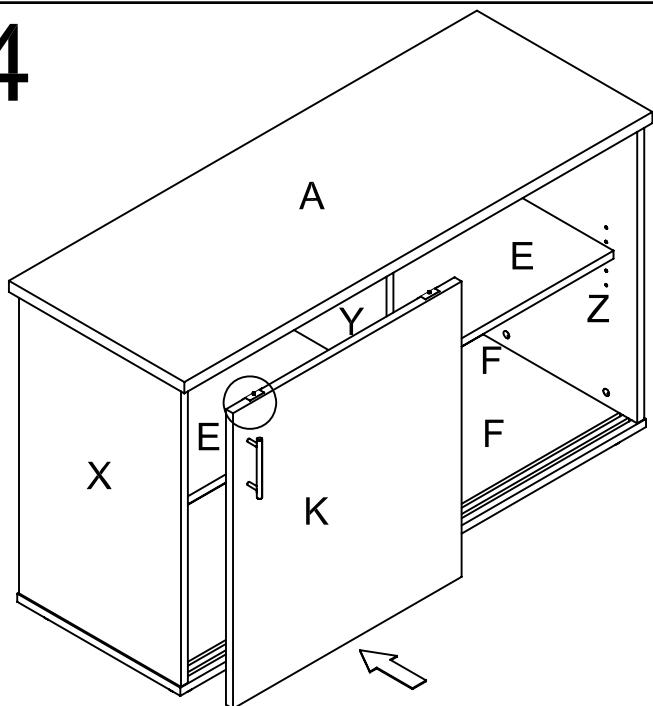

5

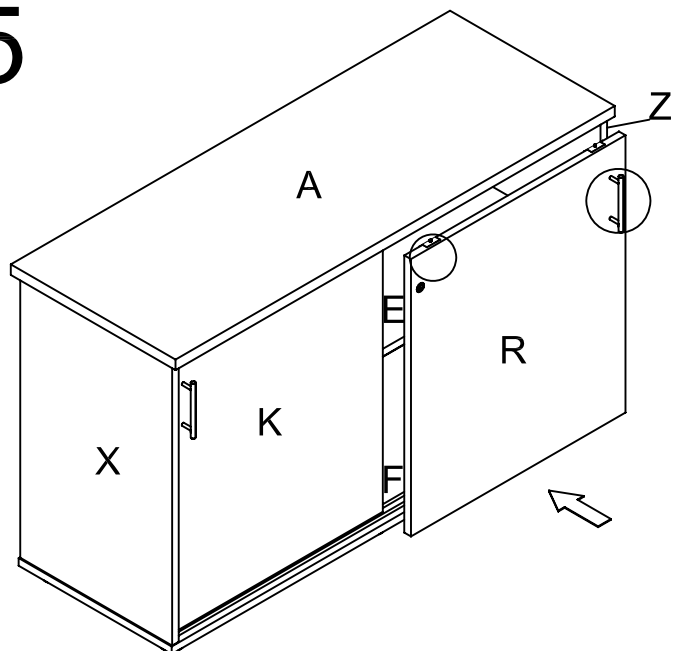













6


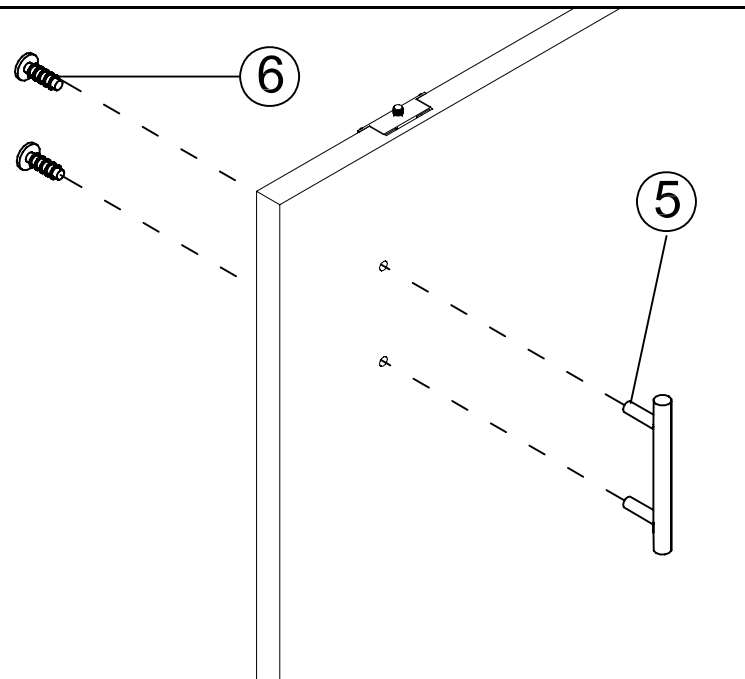
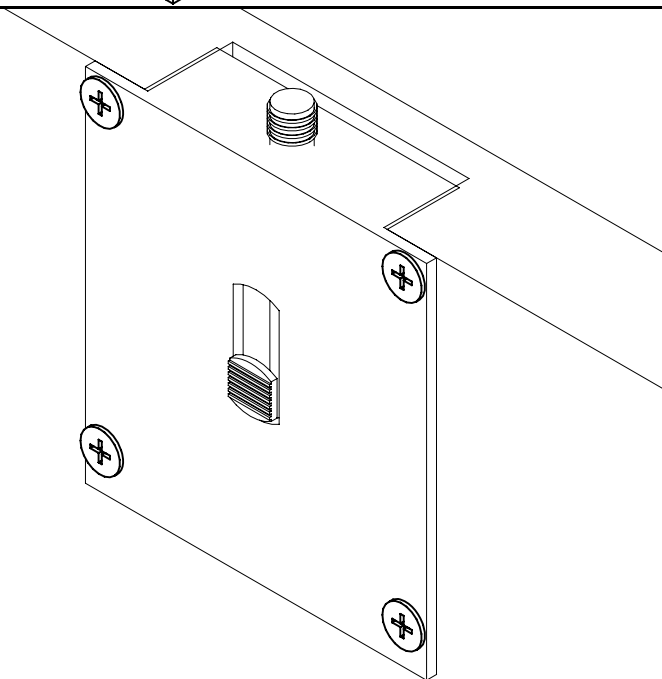


ASSEMBLY INSTRUCTIONS


CCZ1245

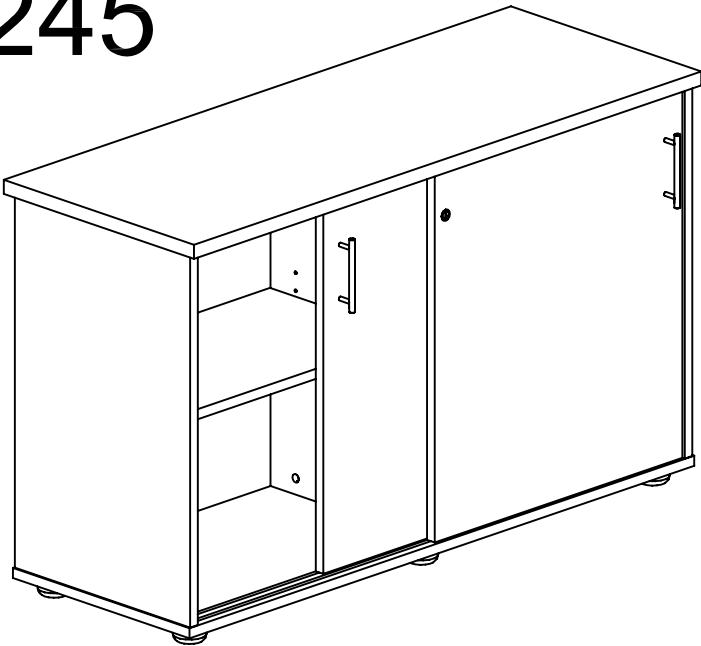

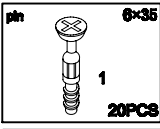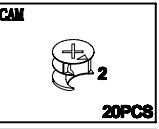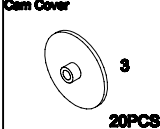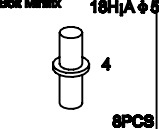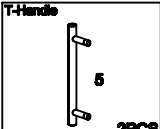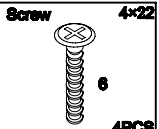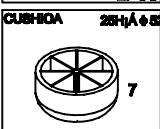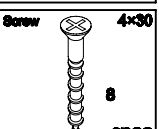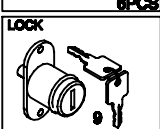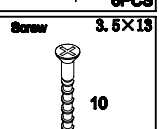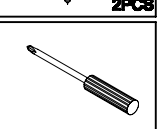
 pin 1 6×35 20PCS	 CAM 2 20PCS
 Cam Cover 3 20PCS	 Bolt M6x8 4 18H1A φ6 8PCS
 T-Handle 5 2PCS	 Screw 6 4×22 4PCS
 CUSHION 7 25H1A φ32 8PCS	 Screw 8 4×30 6PCS
 LOCK 9 1PCS	 Screw 10 3.5×13 2PCS
	

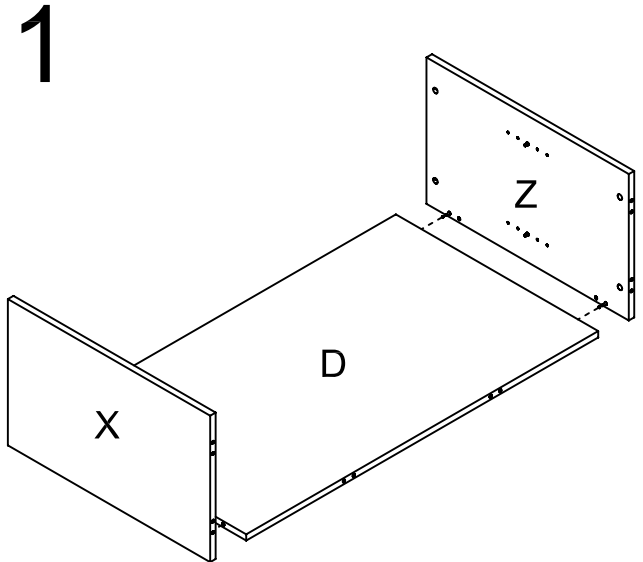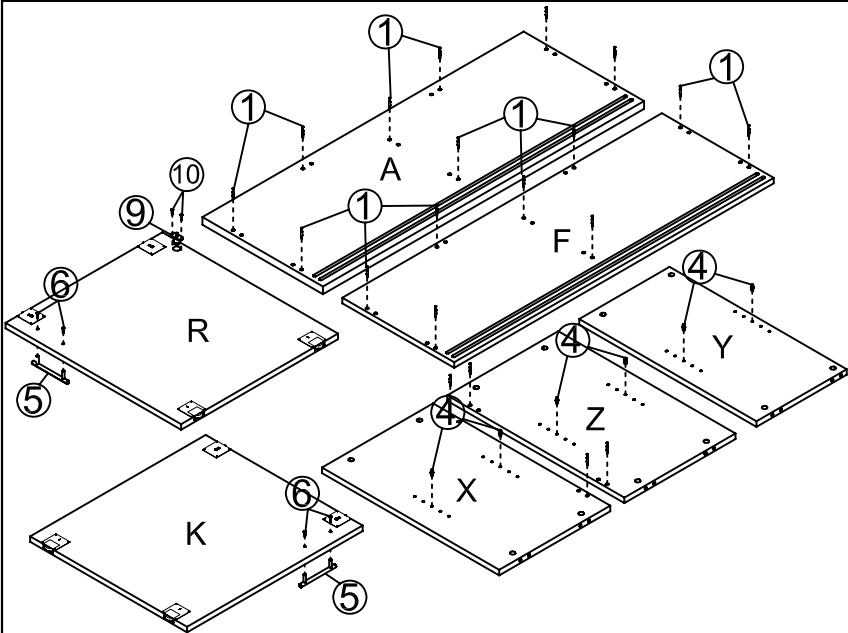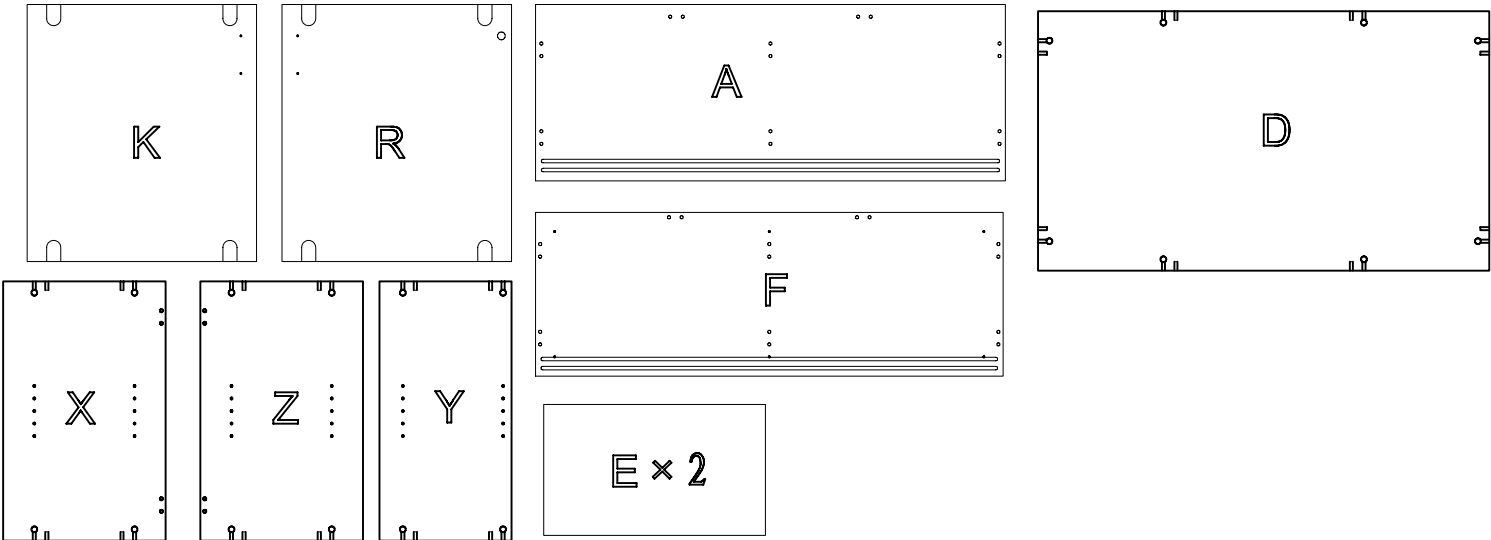


2

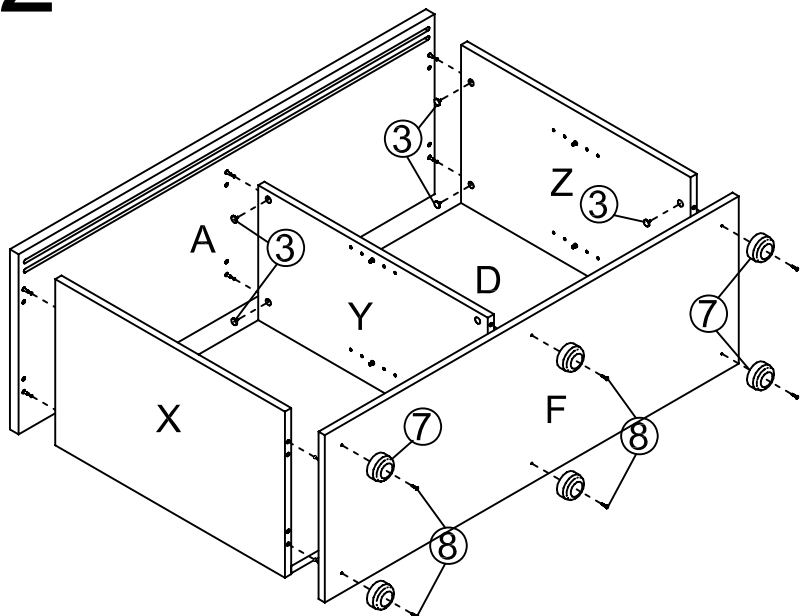


3

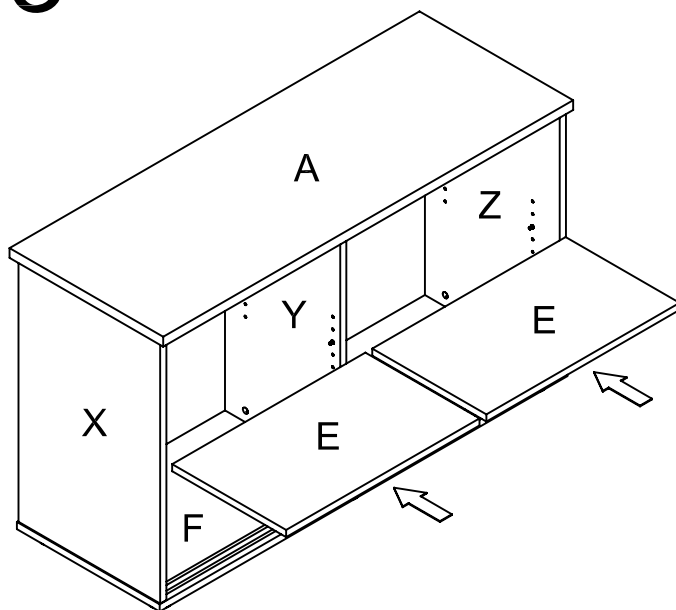


4

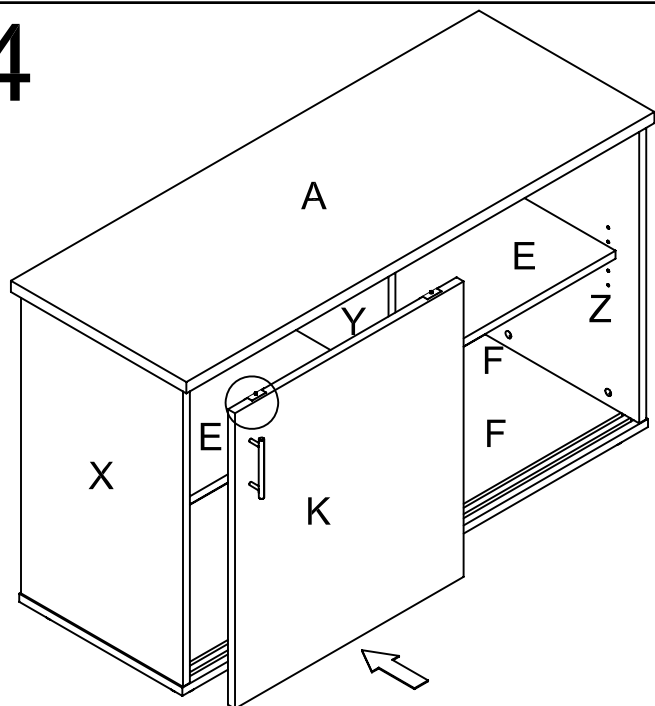

5

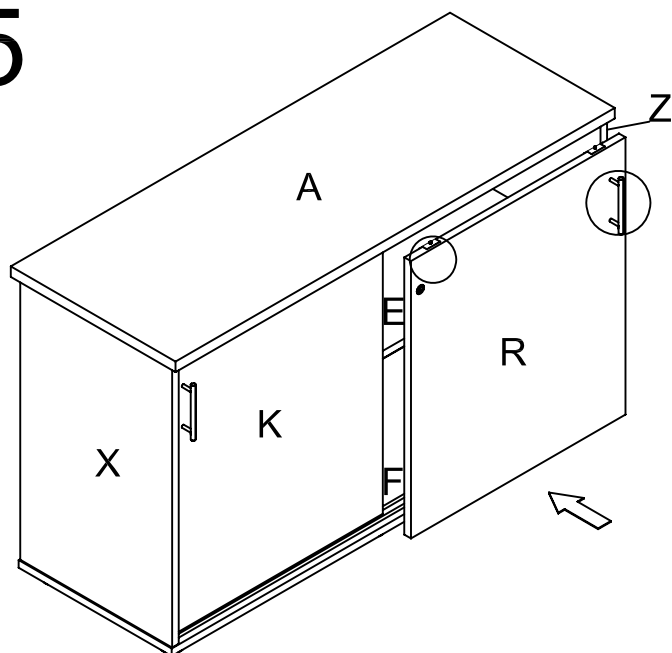

6

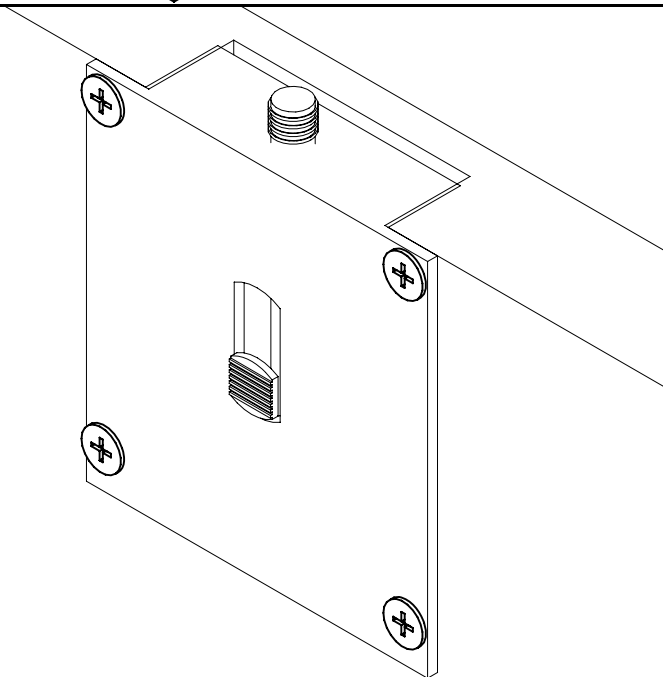

6

