

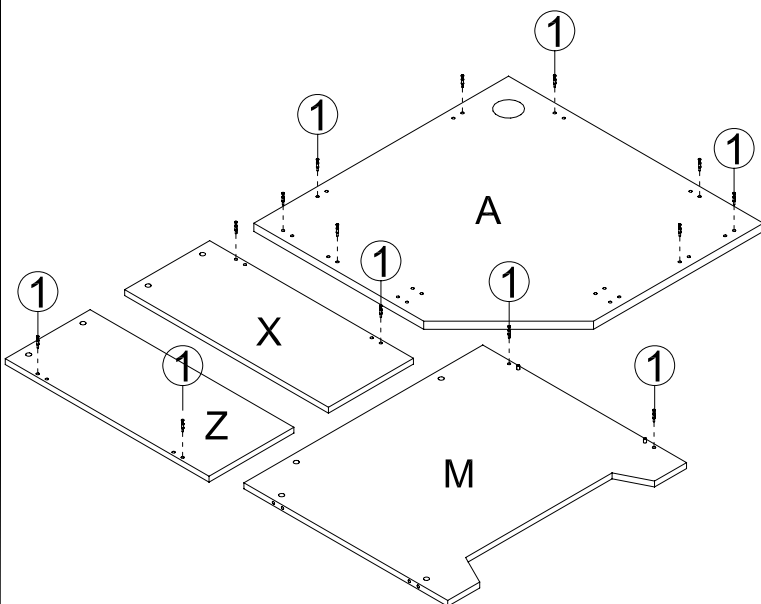
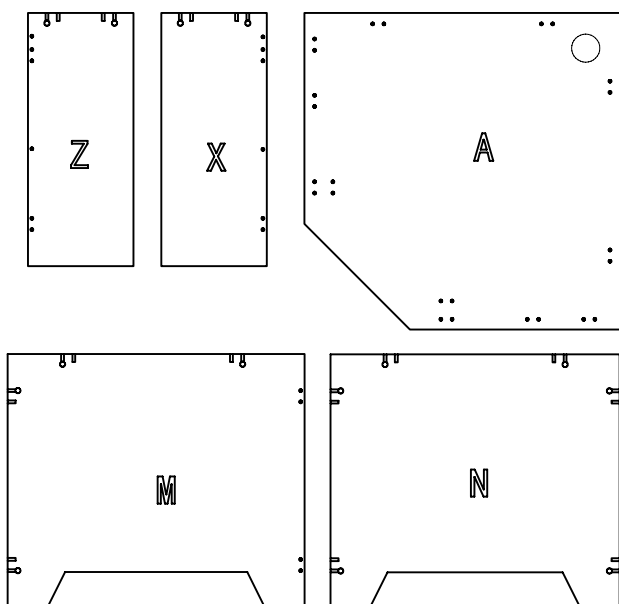
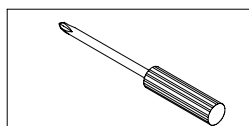
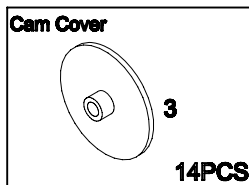
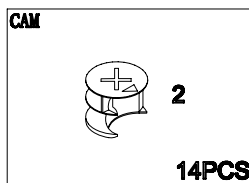


ASSEMBLY INSTRUCTIONS

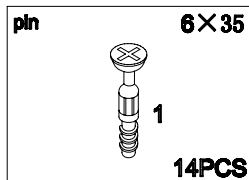


DIRECT
OFFICE FURNITURE


CCW96

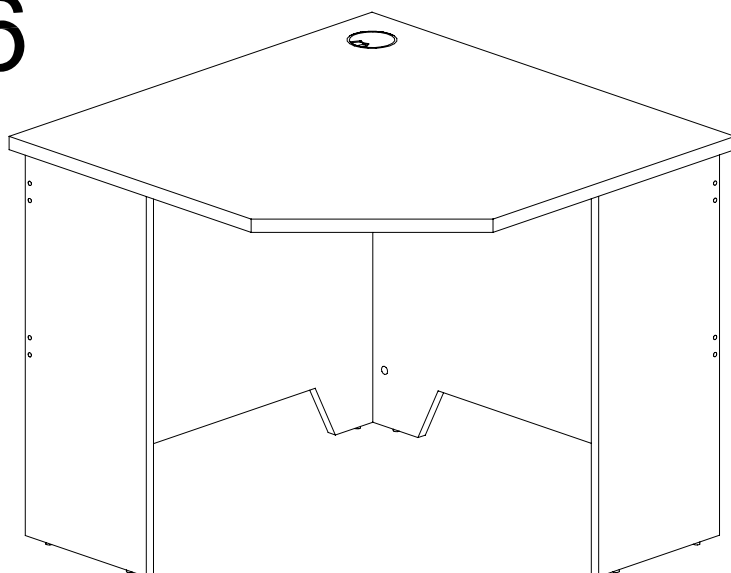

1

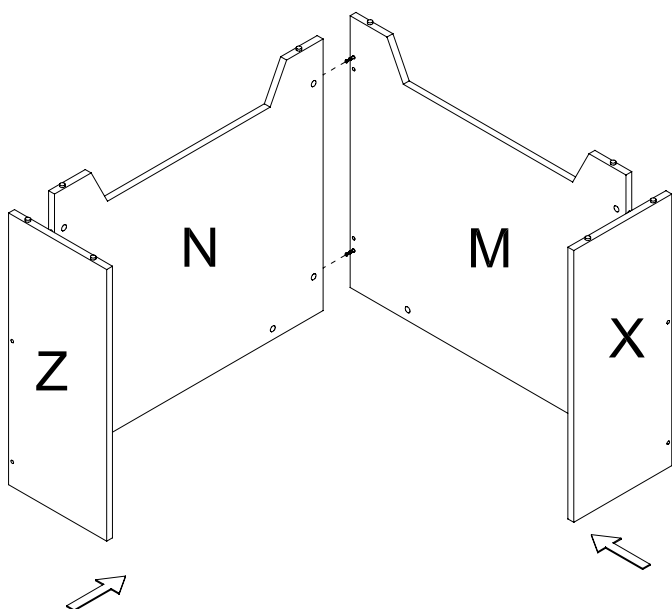




2







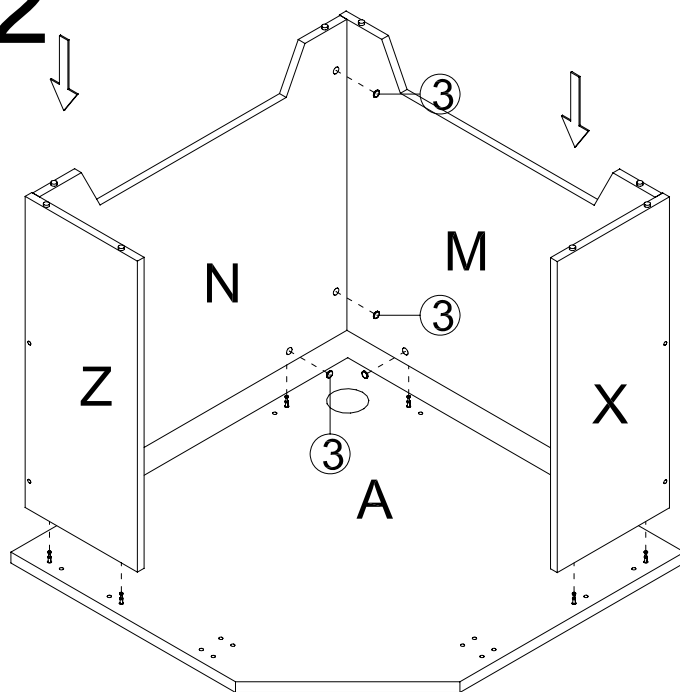


ASSEMBLY INSTRUCTIONS

CWR3

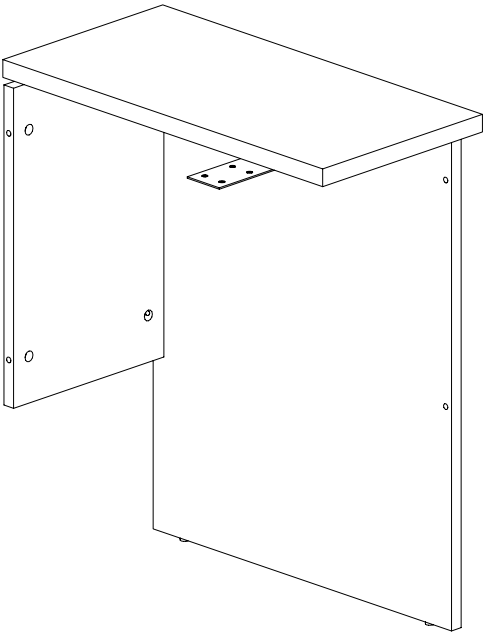


pin	6×35
	1
	7PCS
CAM	
	2
	7PCS
Cam Cover	
	3
	7PCS
CONNECTOR 200×60×2	
	4
	1PCS
Screw	6×12
	5
	8PCS
	

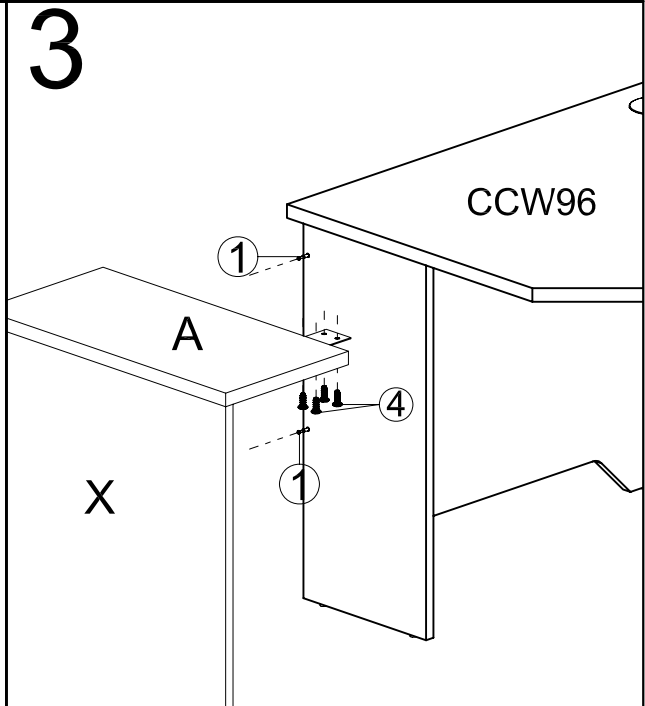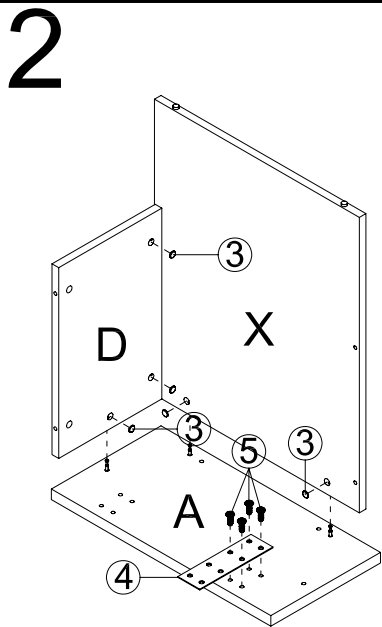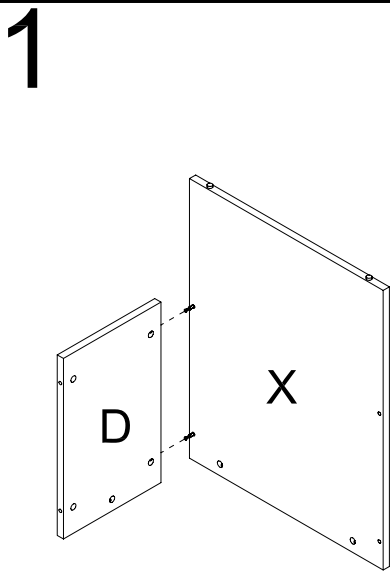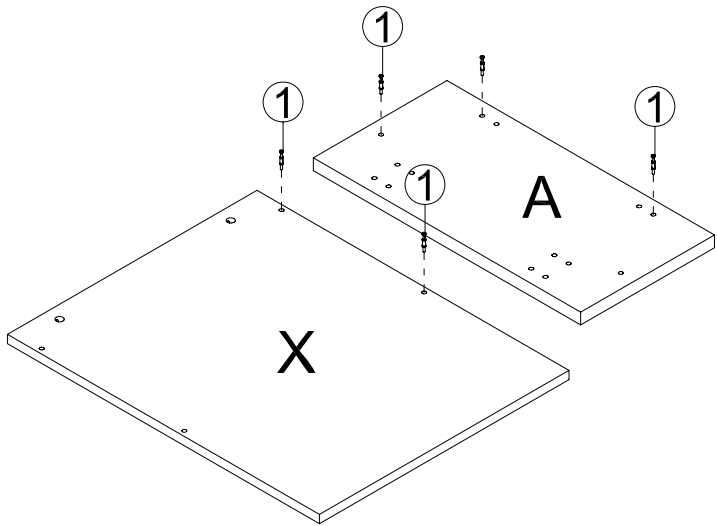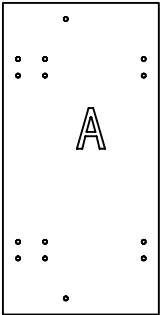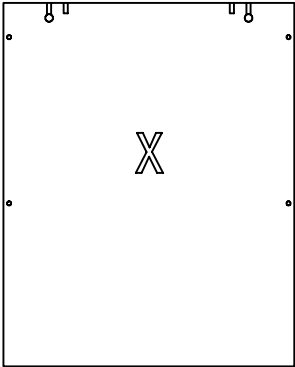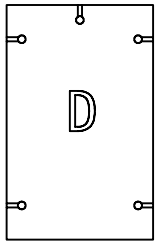








ASSEMBLY INSTRUCTIONS

CWR6

rapidline
FURNITURE FOR TODAY
2011-8-25

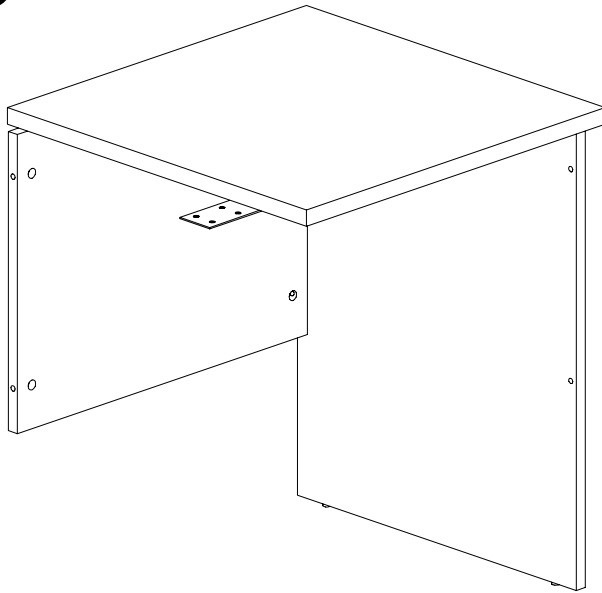

pin	6x35
1	8PCS
CAM	
2	8PCS
Cam Cover	
3	8PCS
CONNECTOR	200x60x2
4	1PCS
Screw	6x12
5	8PCS

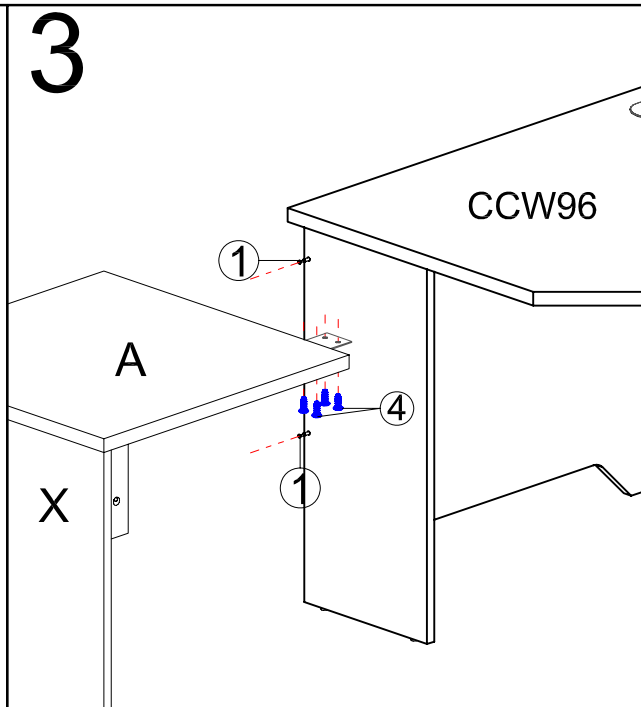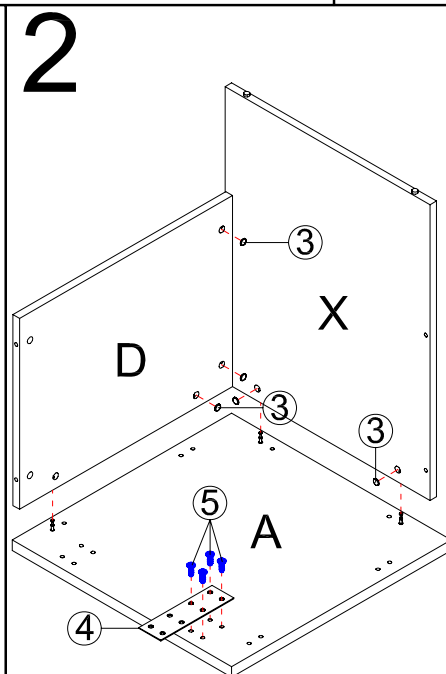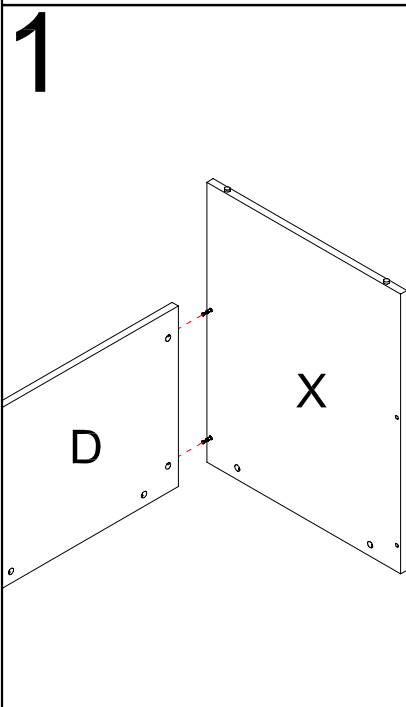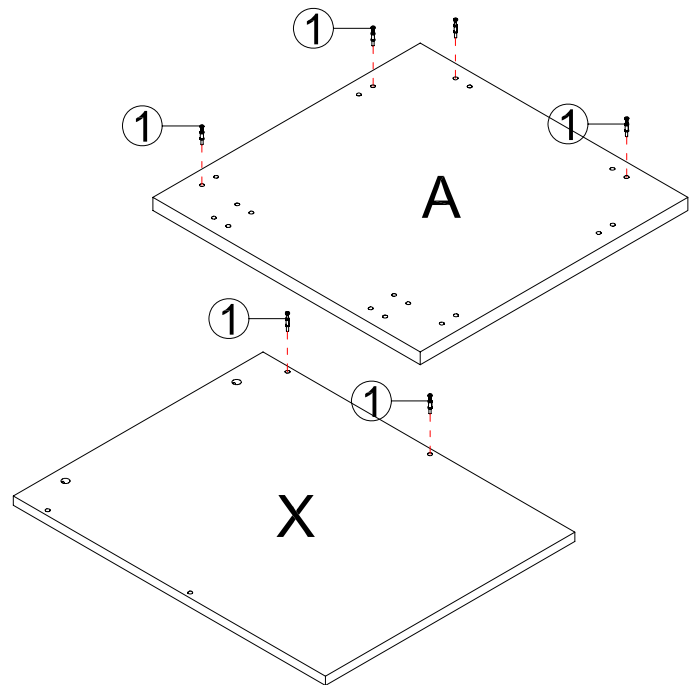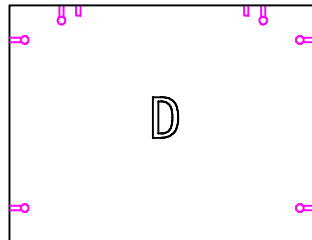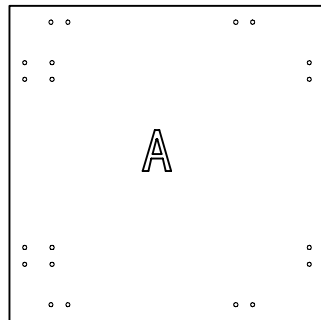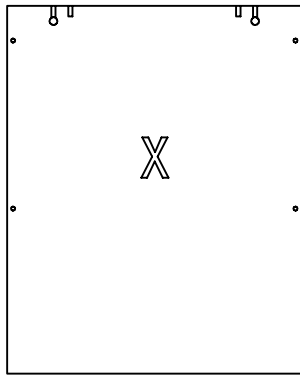


ASSEMBLY INSTRUCTIONS

CWR12

CWR9

rapidline
FURNITURE FOR TODAY
2011-8-25

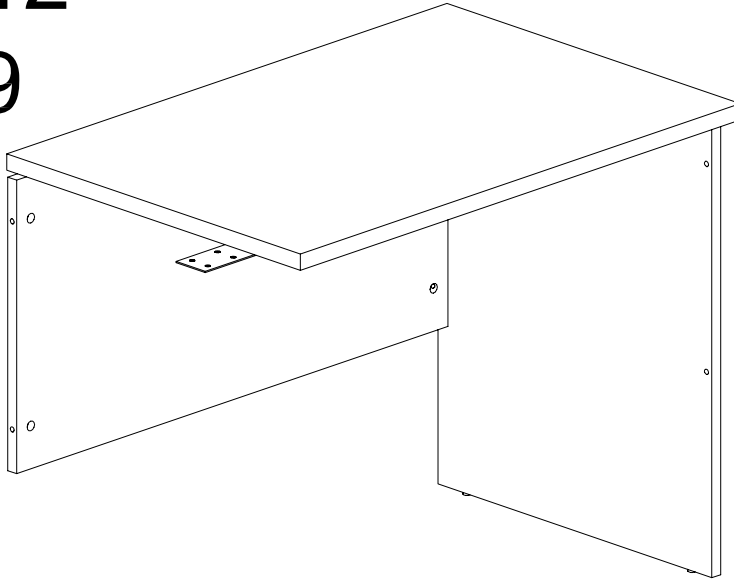

pin	6x35
1	8PCS
CAM	
2	8PCS
Cam Cover	
3	8PCS
CONNECTOR	200x60x2
4	1PCS
Screw	6x12
5	8PCS

