

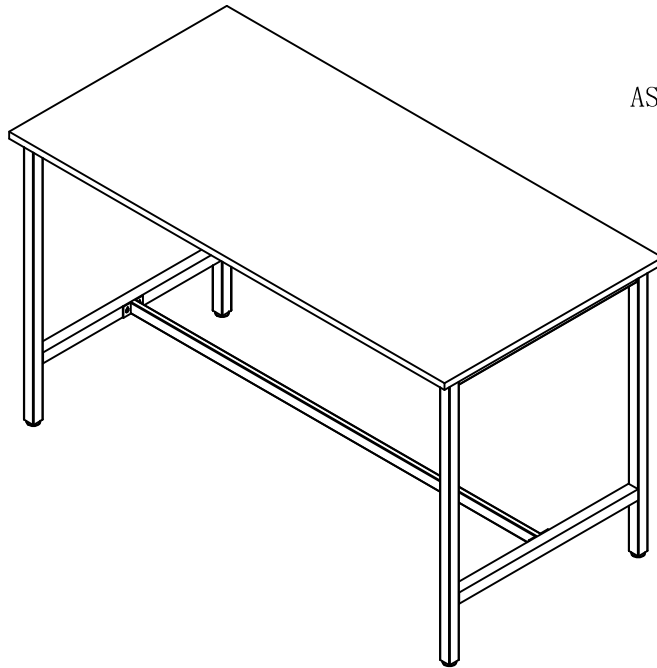
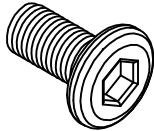



ASSEMBLY INSTRUCTIONS
BHF189

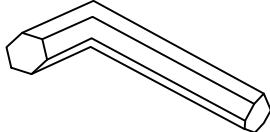

	M8*16H 12pcs
	M5*55H 14pcs
	M6 1pcs

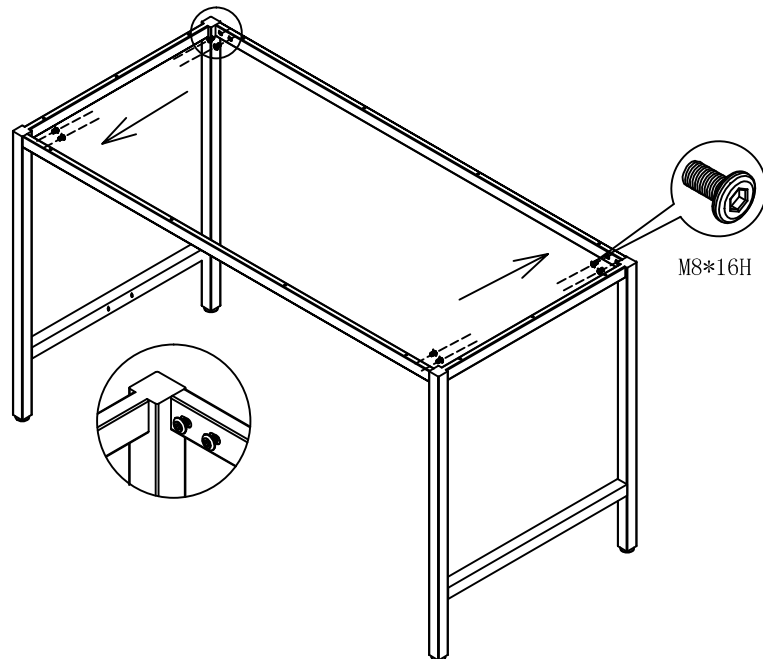

Please do not tighten the screws when assembling the top crossbeam.

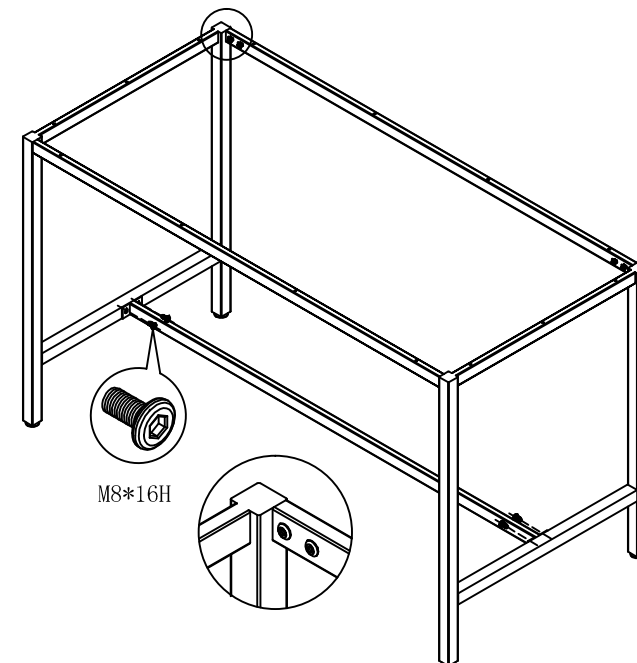

Please tighten the screws after Assembled all the beams.